

TIMER DELETION KIT FITTING INSTRUCTIONS

This kit is suitable only for the domestic gas boilers listed below:

COMBI BOILERS

Independent Combi
Independent+ Combi

KIT CONTENTS:

Link Wire - 1 off
Timer Blanking Plate - 1 off



ALWAYS switch off and disconnect the electricity supply to the appliance before installing this kit.
Merely switching the boiler OFF/SUMMER/WINTER/RESTART switch to 'OFF' will still leave a live feed to the boiler.

REMOVAL OF MECHANICAL TIMER

1. Ease out the mechanical timer using the two screwdriver slots situated at the bottom edge of the timer housing.
2. Disconnect the lead from the control box to the Mechanical Timer.
3. Connect the link wire plug.
4. Locate and push the blanking plate into the control box housing.
5. Power up the boiler and check for correct operation.

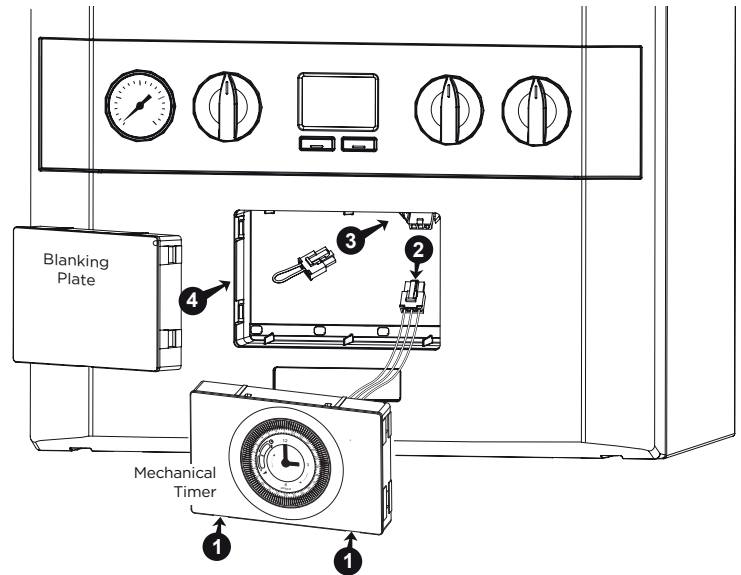


DIAGRAM A:

Programmable Room Stat or Room Stat with Internal Timer

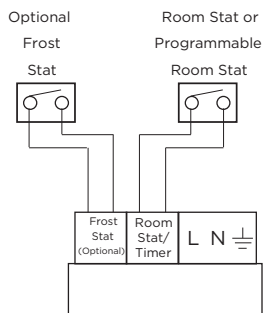


DIAGRAM B:

Room Stat with External Timer

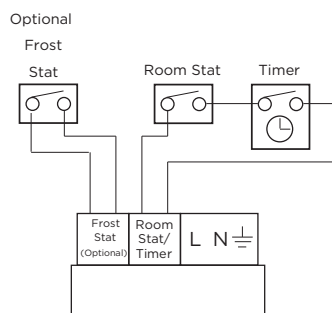


DIAGRAM C:

Use of General Live for Room Stat


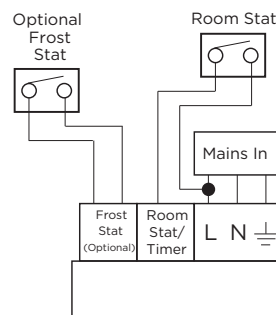


DIAGRAM D:

OpenTherm Device

DO NOT CONNECT 230V TO THESE TERMINALS OR THE BOILER ELECTRONICS WILL BE DAMAGED

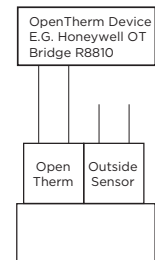

WEEE DIRECTIVE 2012/19/EC

Waste Electrical and Electronic Equipment Directive

- At the end of the product life, dispose of the packaging and product in a corresponding recycling centre.
- Do not dispose of the unit with the usual domestic refuse.
- Do not burn the product.
- Remove the batteries.
- Dispose of the batteries according to the local statutory requirements and not with the usual domestic refuse.

Ideal Boilers Ltd., P.O. Box 103, National Avenue, Kingston upon Hull, HU5 4JN.
Telephone: 01482 492 251 Fax: 01482 448 858. Registration No. London 322 137.

September 2018 UIN 216478 A04

PART OF
**GROUPE
ATLANTIC**
UK & ROI DIVISION

Ideal Boilers Ltd., pursues a policy of continuing improvement in the design and performance of its products. The right is therefore reserved to vary specification without notice.

ideal
BOILERS