

ROOM SEALED AIR INLET HEADER KIT

Imax Xtra EL 715 - 1240

These instructions must be read in conjunction with the Installation & Servicing Instructions supplied with the boiler.

This Room Sealed Air Inlet Kit (Flue Type C53) allows the installer to draw air from outside the building. This is recommended when the room in which the boiler is situated is subject to high amounts of dust / contamination.

KIT CONTENTS

- A Header
- B Air Inlet Spigot - 2 off
- C Air inlet Spigot Gasket - 2 off



INSTALLING THE ROOM SEALED AIR INLET HEADER KIT

1. Remove the boiler front panels and control pods (refer to Installation Instructions).
2. Remove Locking Bracket at rear of boiler and Top infill panel.
3. Remove all front side panels (refer to Installation Instructions).
4. Remove the two screws that secure the painted top panel on each boiler module.
5. Remove air inlet grille on each boiler module (retain the screws to fix the Air Inlet Spigot).
6. Fit gaskets to each spigot.
7. Fit the Air Inlet Spigots to the boiler modules by securing with three screws from the air inlet grille.
8. Refit all panels in reverse order.
9. Place header onto spigots and ensure a good seal.
10. Using a standard 300mm air duct (not provided), connect the air to an appropriate outside wall ensuring it is suitably terminated with a grille to prevent entry of vermin.

